COOKTOP PARTS

For Models: RF272LXTD0
(Universal Silver)

30" ELECTRIC FREESTANDING
SELF CLEAN RANGE

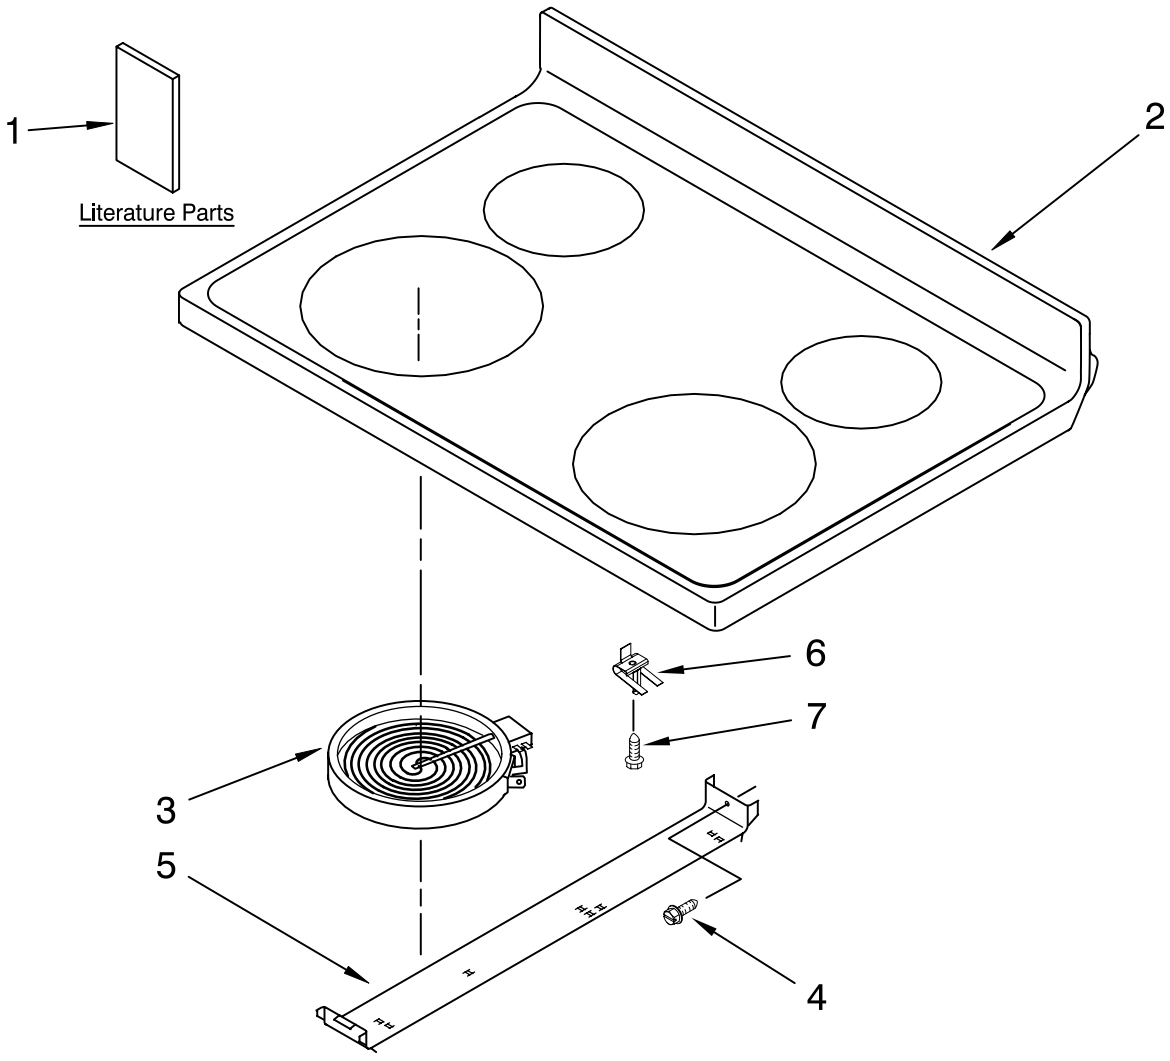

Illus. No.	Part No.	DESCRIPTION
1		Literature
	9762996	Instructions Installations Template, Anti−Tip
	9757142	English/Spanish
	9757143	English/French
	9763001	Owners Manual
	9762972	Tech Sheet
	9762761	Safer Cooking Tips
2	9763326	Cooktop
3		Element, Surface
	8273992	2500 W − LF/RF
	8273994	1200 W − LR/RR
4	3196169	Screw
5	8272791	Bracket, Element
6	W10035930	Spring, Locator
7	3196170	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF272LXTD0

(Universal Silver)

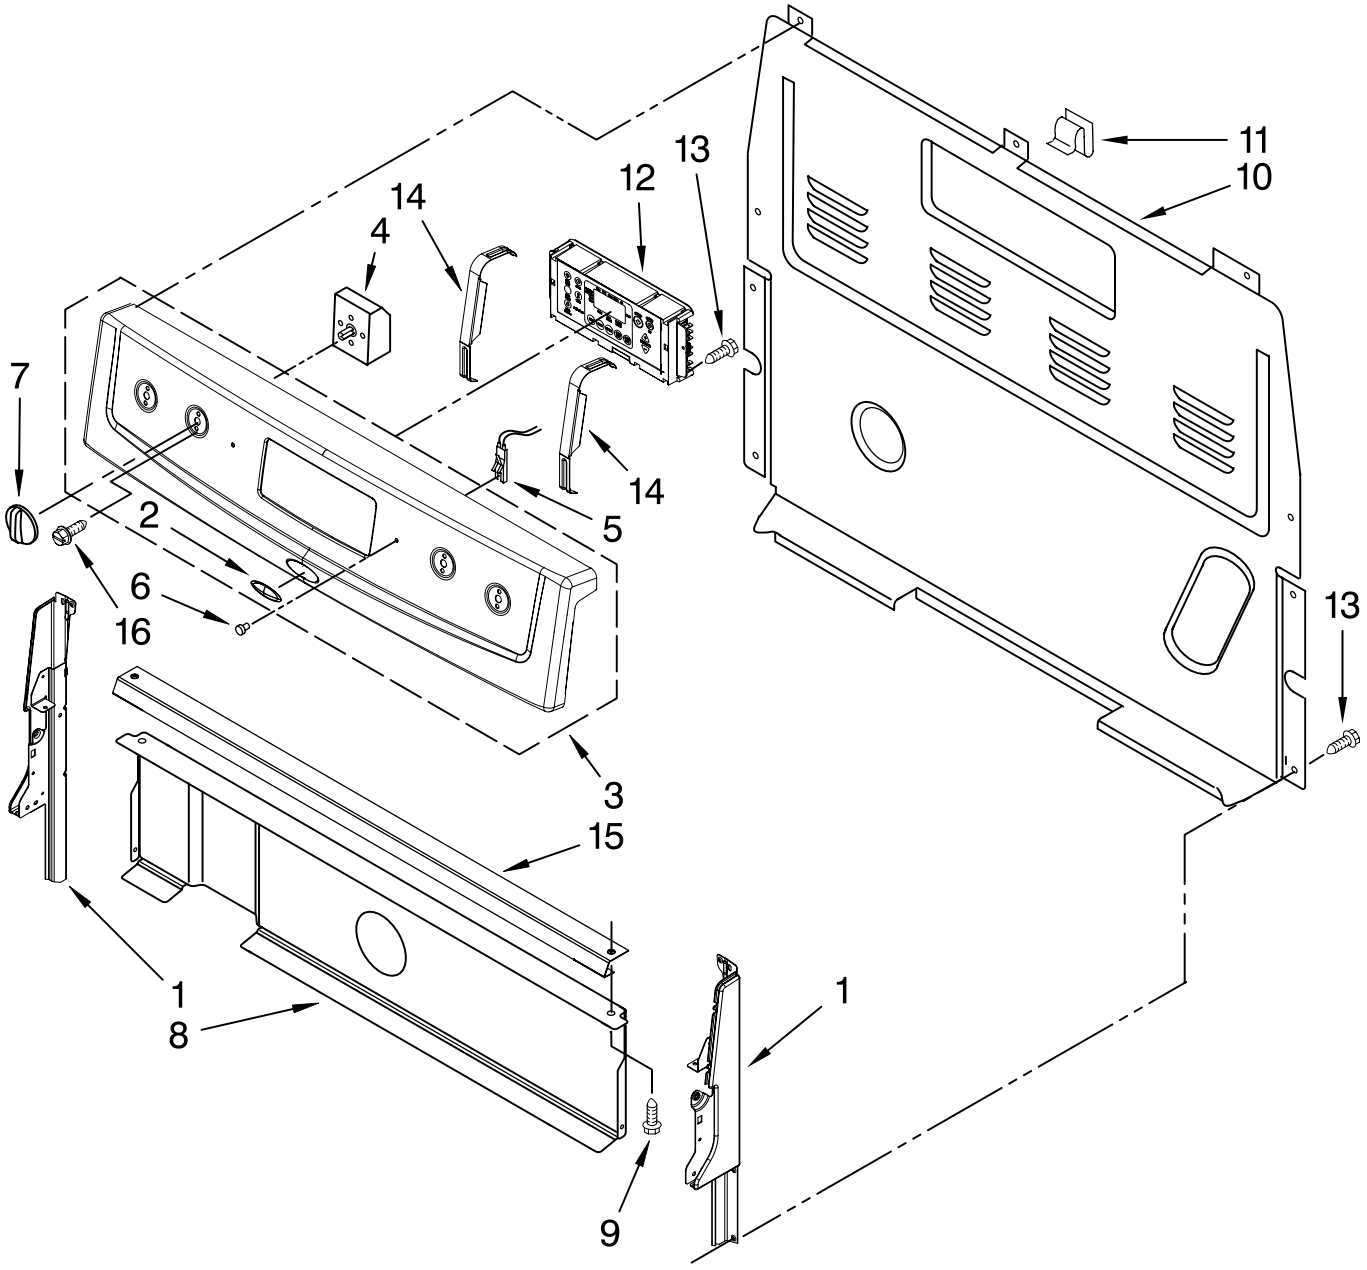

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009080	Black Left Hand
	W10009090	Black Right Hand
2	9757609	Nameplate
3	W10127721	Panel, Control
4		Switch, Infinite
	3148954	LF/RF (Orange)
	3148951	LR/RR (Silver)

Illus. No.	Part No.	DESCRIPTION
5		Light, Indicator
	8523265	Surface Unit (2)
6	3196068	Lens, Light (3)
7		Knob, Infinite (4)
	9761964	Black
8	8523280	Shield, Heat
9		Screw
	3196168	Black

Illus. No.	Part No.	DESCRIPTION
10	8272473	Cover, Upper
11	8273564	Clip
12	W10114371	Control, Range
13	3196178	Screw
14	9762078	Brkt−Mntg., EOC
15	9762095	Brkt−Mntg, Console
16	3400882	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF272LXTD0
(Universal Silver)

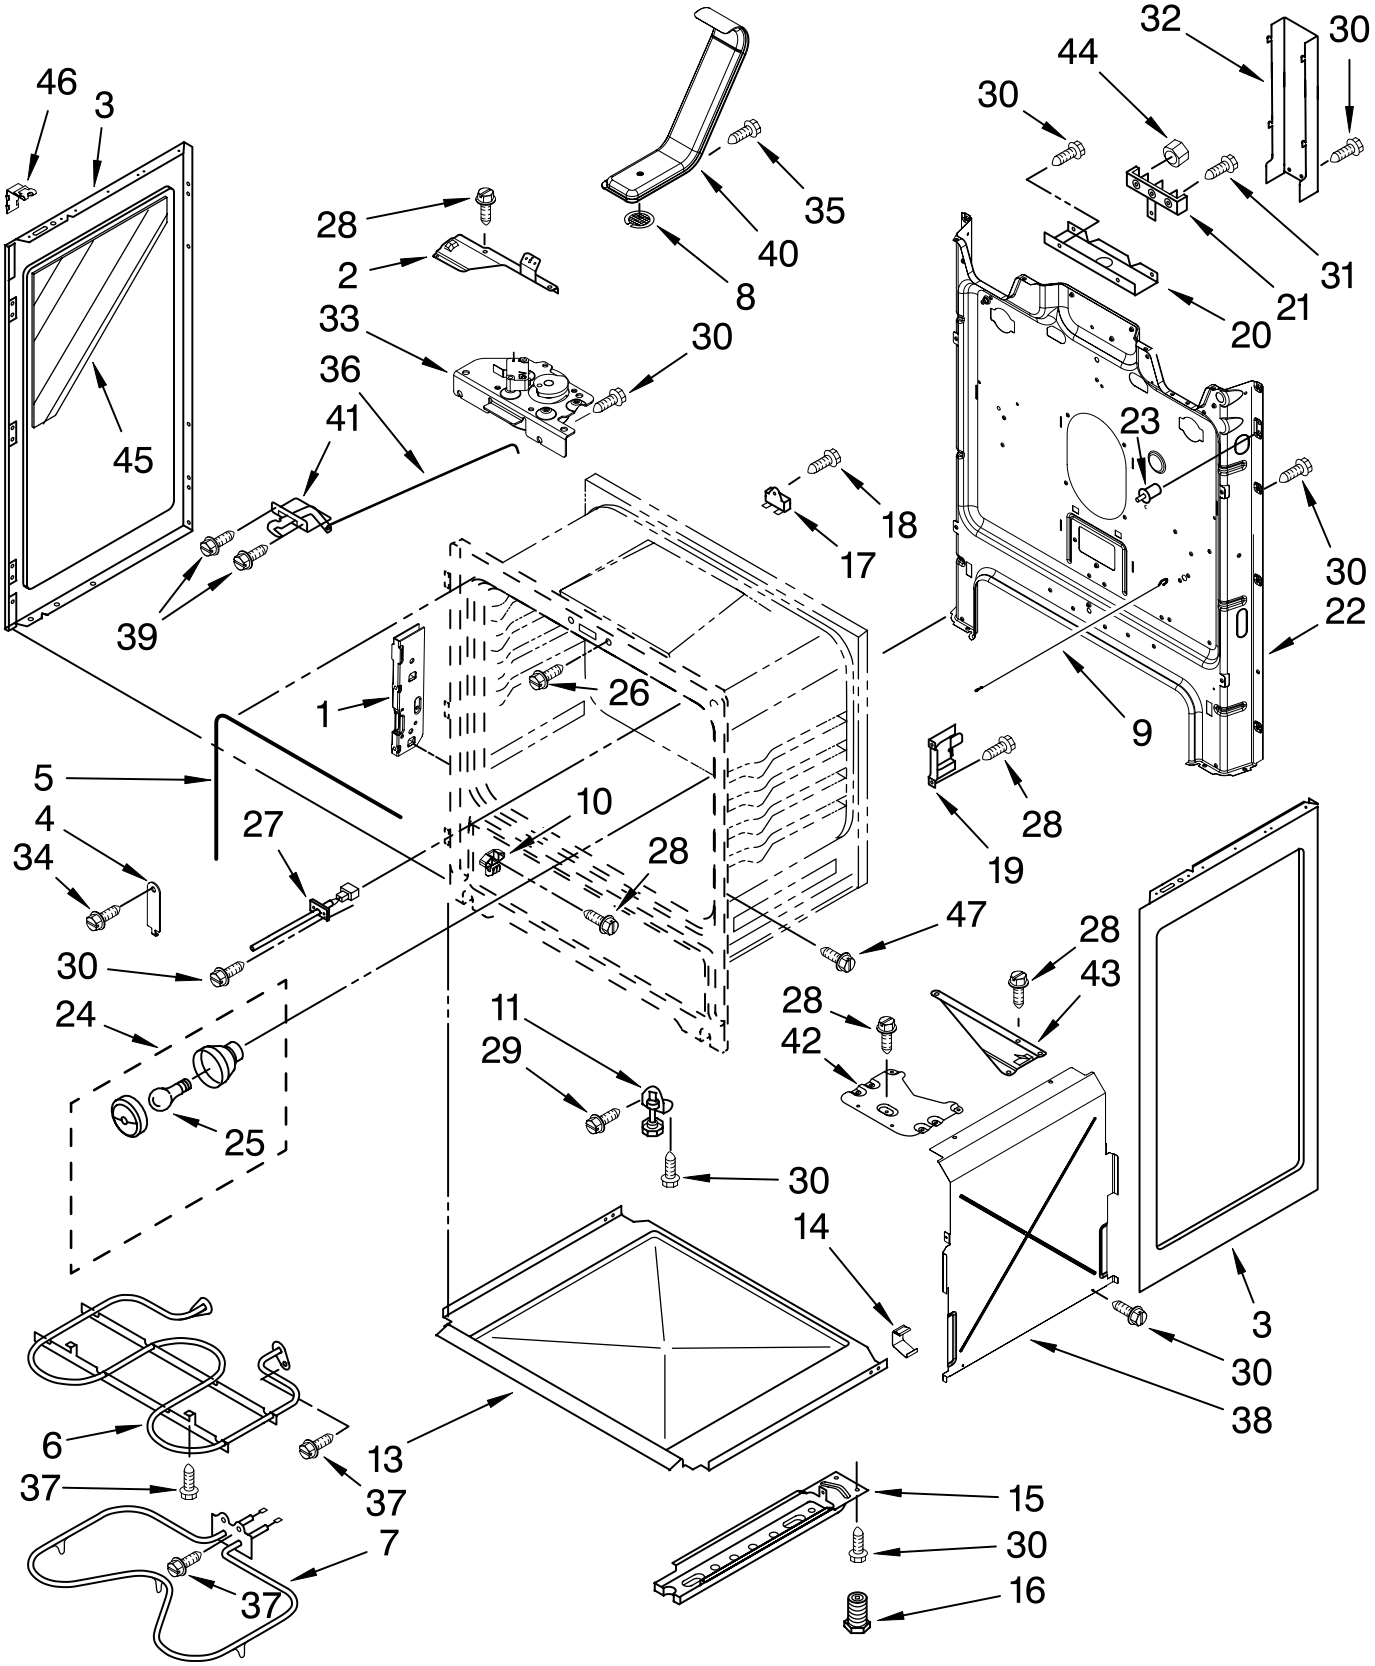

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF272LXTD0

(Universal Silver)

Illus. No.	Part No.	DESCRIPTION
1	9760407	Brkt − Mounting
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053832	Black
4	9761517	Clip, Door Mntg(2)
5	8522416	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	9761301	Screen−Catalyst
9	9757239	Rod − Dr Switch
10	9759785	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	W10058460	Foot, Rear (2)
17	3196548	Thermal, Fuse
18	3196172	Screw
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	9758701	Spacer − Door
27	8273902	Sensor, Oven
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	9758283	Cover, Box
33	W10107820	Latch Asy, Rear
34	W10031780	Screw
35	3196566	Screw
36	W10078380	Rod, Latch
37	3196174	Screw
38	9758238	Retainer, Insul(2)
39	3196560	Screw (2)
40	9761299	Flue
41	9761013	Latch, Door
42	3195736	Support, Front (2)
43	3195987	Support, Corner RR
44	112432	Nut
45	9761490	Insulation, Foil
46	9761512	Clip, Mounting
47	W10067840	Screw (6)

INSULATION

	8272616	Insulation, Wrap
	8272612	Insulation, Back
	8272613	Insulation, Vent

DRAWER & BROILER PARTS

For Models: RF272LXTD0
(Universal Silver)

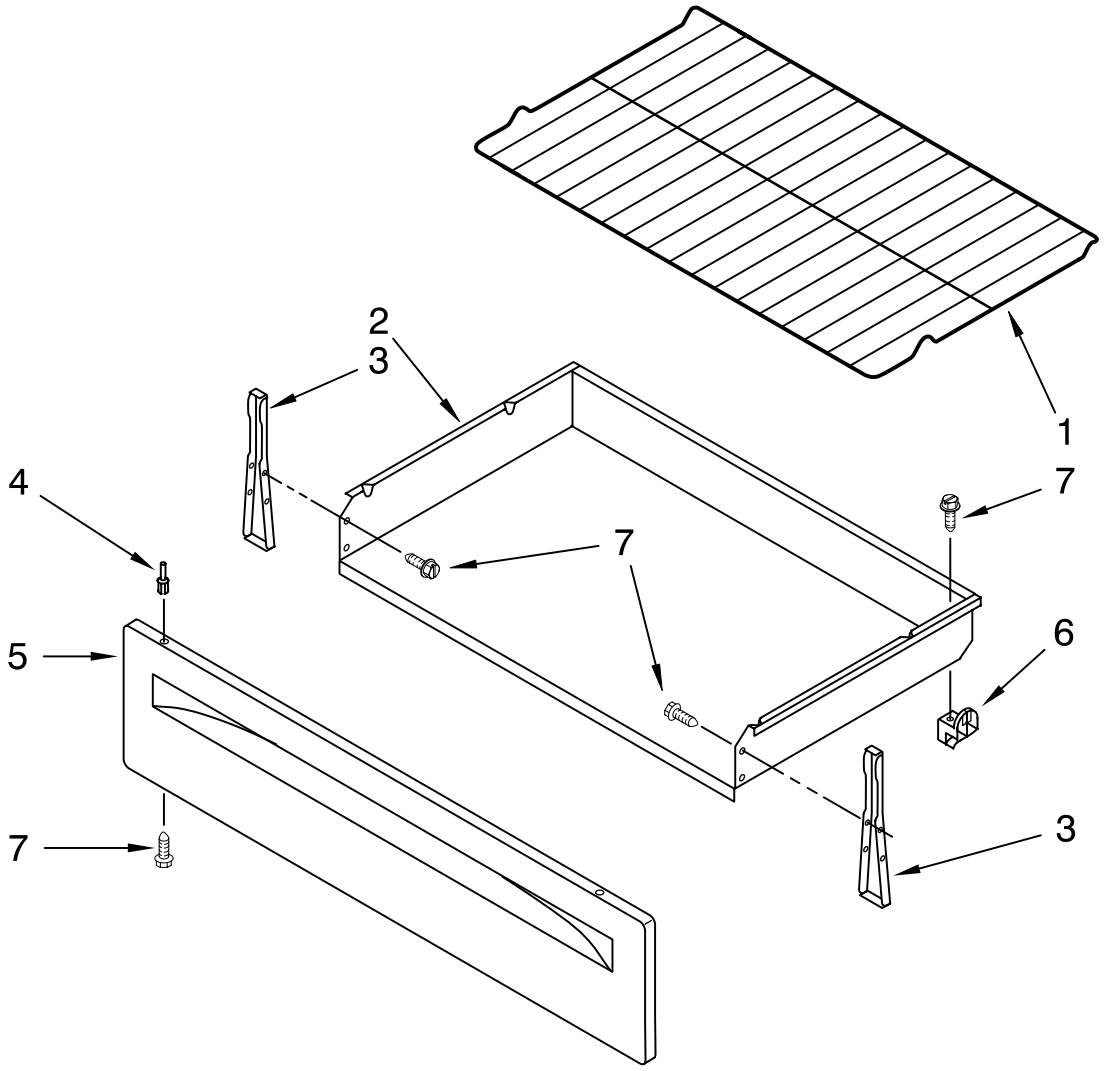

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	9761030	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196813	Black
5	9761694	Panel, Drawer Frnt
6	8053334	Glide, Drawer (2)
7	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF272LXTD0
(Universal Silver)

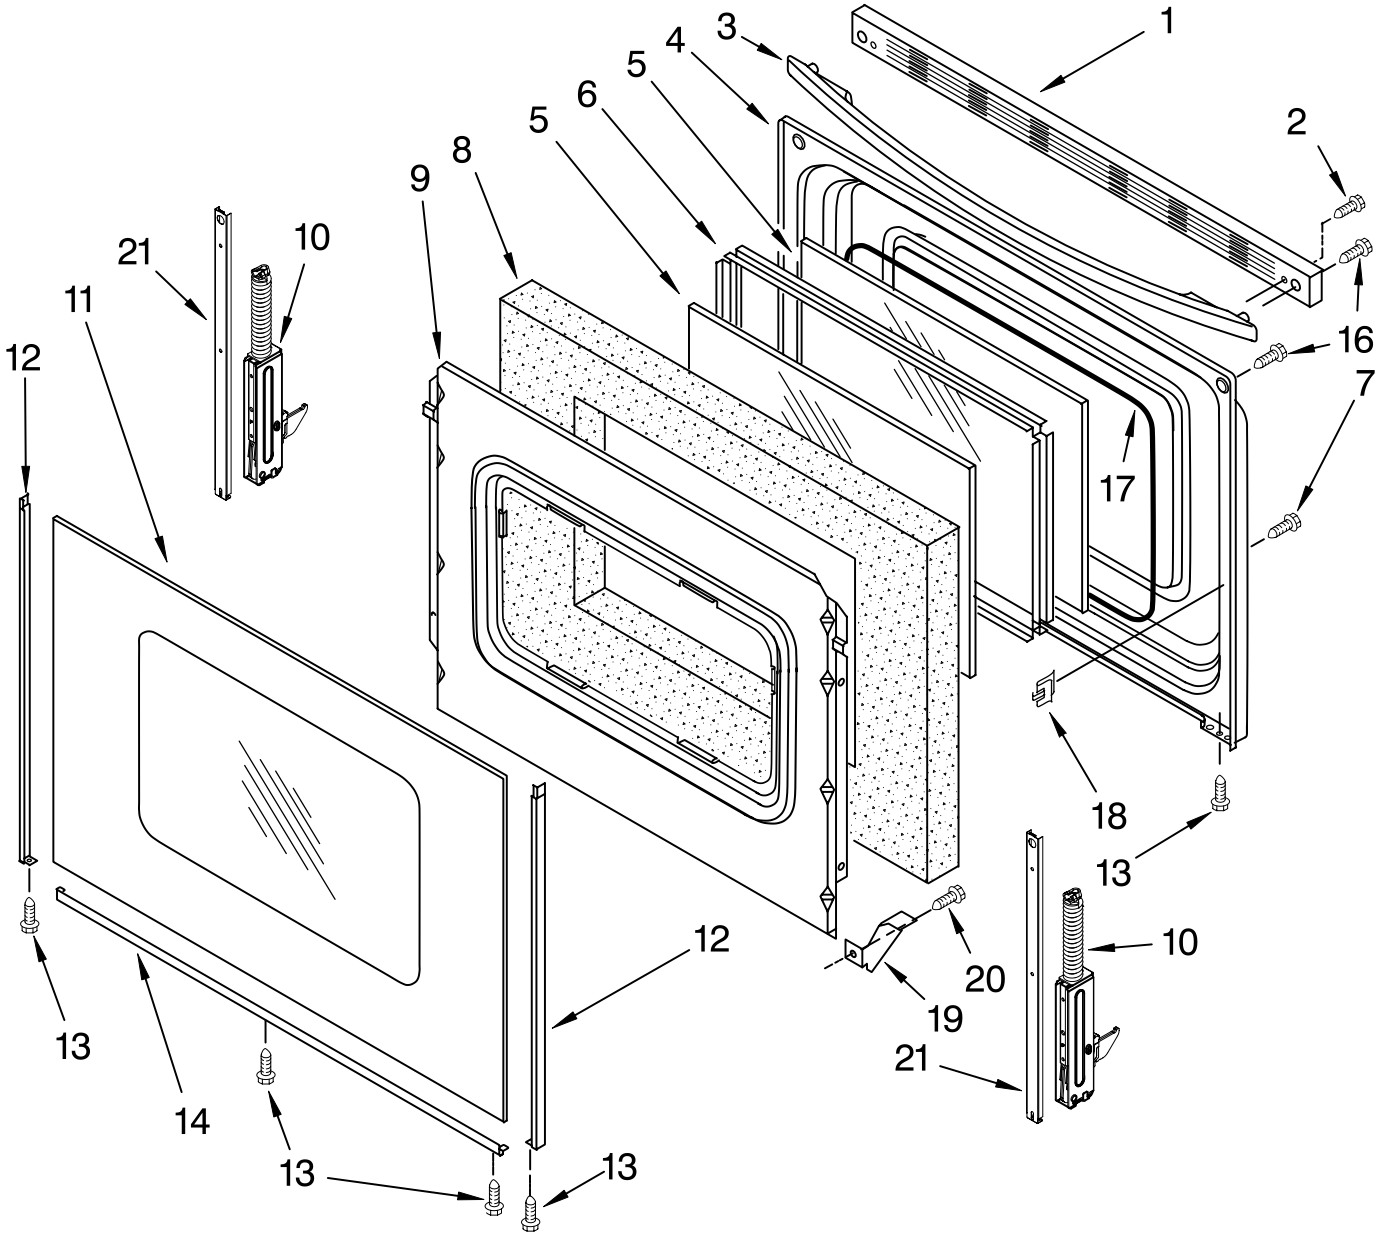

Illus. No.	Part No.	DESCRIPTION
1	9762394	Trim, Top
2	3196164	Screw
3		Handle, Door
	9761983	Black
4	9761344	Liner, Door
5	9758162	Glass, Inner (2)
6	3186289	Frame, Glass
7	W10031790	Screw
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.
10	9761496	Hinge, Door
11	9761699	Glass, Outer Door
12		Trim, Door Side
	8523171	Black L.H.
	8523165	Black R.H.
13	3196160	Screw
14	8523180	Trim, Lower Door
16	W10031780	Screw
17	8522414	Seal, Window
18	3196025	Clip, Glass (6)
19	3196794	Bracket, Window(2)
20	3196165	Screw
21	W10113759	Strap, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: RF272LXTD0
(Universal Silver)

Illus. No.	Part No.	DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150° c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242827	Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass
4396923	Pan, Broiler

ANTI−TIP KIT

W10017440	Anti−Tip Kit

WIRING HARNESS PARTS

W10114915	Harness, Wire (Cooktop Left)
W10114894	Harness, Wire (Cooktop Right)
9762428	Harness, Wire (Sensor/Dr Switch)
8523279	Wire, Ground
3196154	Screw
9762953	Harness, Wire (Main)
313660	Clip, Wire Ground
3196173	Screw
8524132	Shield, Wiring
3196174	Screw (Grnd Wire / Back)